



Application Note AN-PAN-1004

# ABC Titration: Analysis of alkali, carbonate, hydroxide, and sulfide in pulping liquors

The breakdown process from solid wood to paper involves quite a number of preparative steps. The main process which converts wood into pulp is named the **Kraft process**, which utilizes white liquor (a mixture of sodium hydroxide «NaOH» and sodium sulfide «Na<sub>2</sub>S») to break down the lignin and cellulose linkages. In the Kraft pulping process, the wood chips are

saturated with white liquor and cooked at high temperatures in pressurized digesters, forming a liquid stream consisting of pulp and black liquor. After a washing step, the resulting pulp is sieved, washed, and bleached to produce paper; and the now weak black liquor continues to the chemical recovery loop into the evaporators. After passing through multiple evaporators, the

now concentrated black liquor enters the recovery boiler, where sodium sulfate « $\text{Na}_2\text{SO}_4$ » is reduced to  $\text{Na}_2\text{S}$ . Then, the green liquor (containing mostly  $\text{Na}_2\text{S}$  and sodium carbonate « $\text{Na}_2\text{CO}_3$ »), is sent to the causticizing plant to react with lime « $\text{CaO}$ » and regenerate white liquor for the pulping process. Here, the recovery cycle is completed.

In the Kraft recovery cycle, the constant monitoring of residual effective alkali «REA» of black liquor, total titratable alkali «TTA», active alkali «AA», and effective alkali «EA» of green and white liquor, are necessary for maintaining the optimal recovery process, improving reaction yield, and enhancing process optimization. However, these streams are very hot and corrosive (like white liquor), thus there are risks

of accidents when sampling manually.


It is also important to consider that variations in one part of the cycle will disturb downstream unit operation. In turn, these disturbances can create further variations, causing a downward spiraling effect. Conventional laboratory analysis leads to long response times between the sampling and the analysis in case of process changes, undermining the recovery efficiency.

A great choice for online monitoring alkali, carbonate, hydroxide, and other such important parameters in pulping liquors is the **2060 Process Analyzer** from Metrohm Process Analytics. Save time, avoid spillages, and increase efficiency without manually sampling process points.

## APPLICATION

The 2060 Process Analyzer is used to determine alkali (AA, EA, and TTA), carbonate, hydroxide, sulfide, and causticizing degree «CE%» online in pulping liquors. The analyzer is suitable to analyze white, green, black, and wash liquors

with multiple sample lines, outputting results for closed loop control. This method conforms to the standard method SCAN-N 30:85, the pulp and paper industry standard.

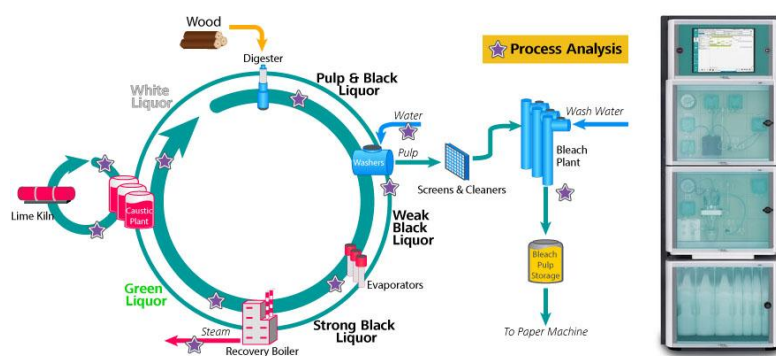

**Figure 1.** (left) Typical Kraft sulfate pulping and recovery process. (Right) 2060 Process Analyzer for ABC titration measurements for the pulp and paper industry.

## TYPICAL RANGE

0.1–3 mol/L  $\text{CO}_3^{2-}$  and  $\text{S}^{2-}$ , 0.1–6 mol/L  $\text{OH}^-$ , alkali 0.1–8 mol/L. Higher and lower ranges are

possible with the use of special preconditioning systems.

## REMARKS

Additionally, the **sulfate concentration** can be measured online with thermometric titration in the same instrument. In combination with the ABC titration, this gives a perfect indication for the **degree of reduction** and information about

the recovery boiler efficiency, which acts as a reactor. The thermometric titration gives a faster response and avoids the use of toxic chemicals. Other online applications in the pulp and paper industry are during the bleaching process.

## BENEFITS FOR ONLINE TITRATION IN PROCESS

- Increased causticizing efficiency
- Reduced TTA and EA variability
- Greater and faster return on investment
- Safe working environment and automated sampling

## CONTACT

メトロームジャパン株式会社  
143-0006 東京都大田区平  
和島6-1-1  
null 東京流通センター アネ  
ックス9階

[metrohm.jp@metrohm.jp](mailto:metrohm.jp@metrohm.jp)

## CONFIGURATION



### 2060 Process Analyzer

2060 Process Analyzerは、無数のアプリケーションに対応するオンライン湿式化学アナライザーです。このプロセスアナライザーは、「ヘーシックキャビネット」と呼ばれる中核フラットホームによって構成される新たなモジュラー式コンセプトを提供するものです。

ヘーシックキャビネットは、2つの部分から構成されます。上部はタッチスクリーンと産業用PCを含みます。下部には、実際の分析のためのハードウェアが格納されるフレキシブルな湿式部が含まれます。基本湿式部の容量が分析課題を解決するのに充分でない場合、最も困難なアプリケーションでも解決できる十分なスペースを確保するため、ヘーシックキャビネットを4つまでの追加湿式部キャビネットに拡張することが可能です。追加キャビネットは、各湿式部キャビネットを、アナライザーの稼働時間を増加させる内蔵式(非接触式)レベル検出を有する試薬キャビネットと組み合わせるという方法によってコンフィグレーションすることかできます。

2060 Process Analyzerは様々な湿式化学技術を提供します: カール フィッシャー滴定、光度測定、直接測定、および標準追加メソッドです。

プロジェクトのすべての要求を満たすべく(もしくはお客様のすべての必要性を満たすため)、頑丈な分析ソリューションを保証するためのサンプルフレコンティションシステムをご利用いただくことも可能です。弊社は、冷却や加熱、減圧、脱気、ろ過などのような、いかなるサンプルフレコンティションシステムでも提供することかできます。